



6mm (1/4") and 3mm (1/8") Drill Bits


Utility Knife

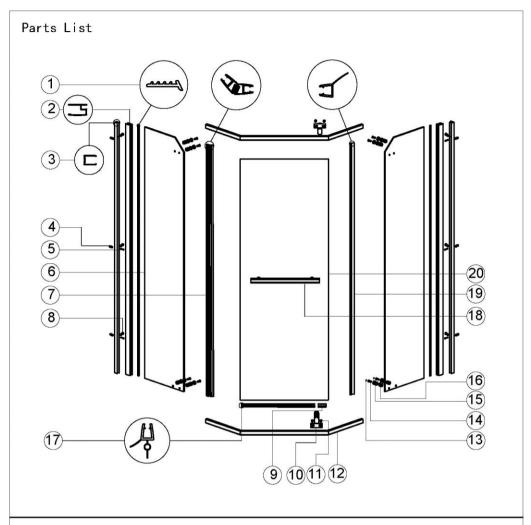


1

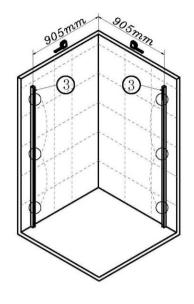

Install the Wall jamb.












2

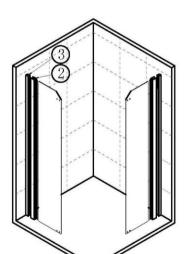



Install the Side Panel Glass.

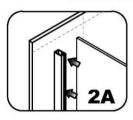





Important: Seal must be fully inserted.






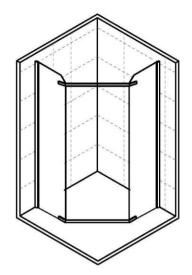


Fit metal brace to the top and bottom.



Install the top hinge to the door.



Install the door onto the bottom hinge.




Install the bottom door hinge on the brace.


3D


3F



Attach the top hinge to the top brace.






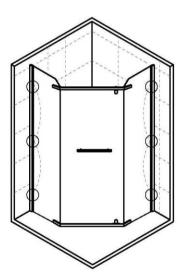




Install the Handle.






5

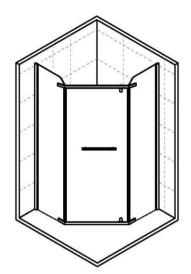


Note steps 5B to 5D show the seals being installed on the door with the frame removed for clarity.


Cut the seals to the correct length before fitting.






Install the vertical door seals along the whole height of the door, and fit the bottom drip strips in between.





6

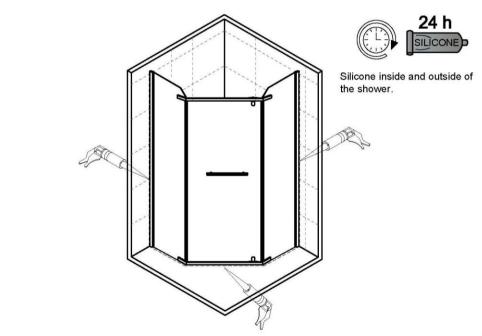

5