

Installation manual of LED Medicine Cabinet

1

Size:

24"*27-1/2"*5-1/2" (610*700*140mm)

30"*27-1/2"*5-1/2" (760*700*140mm)

36"*27-1/2"*5-1/2" (910*700*140mm)




48"*27-1/2"*5-1/2" (1210*700*140mm)

Please read the installation instructions carefully before installation.


This product should only be installed by qualified professionals.

Before installing this product, you must confirm that the power supply is disconnected

Tools

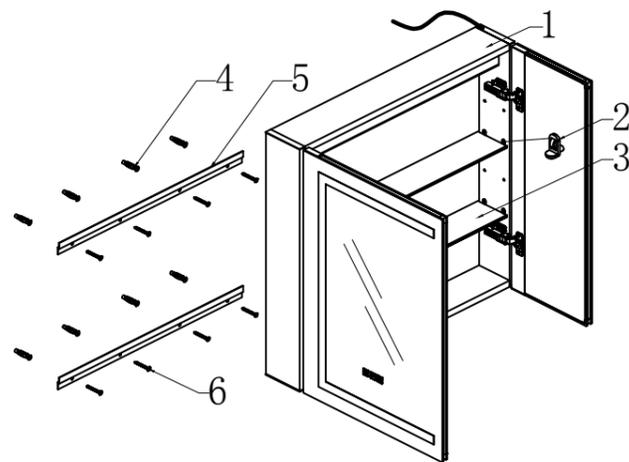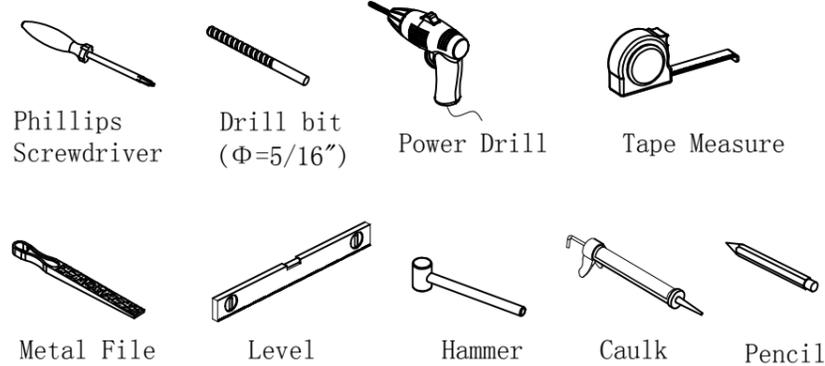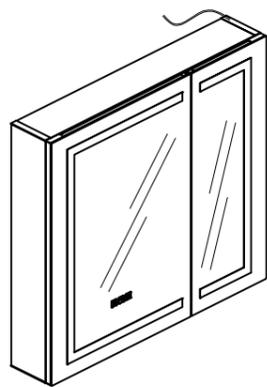


| Parts list | | | | | |
|------------|----------------------|----------|---|-------------------|---------|
| # | ITEM | Qty | # | ITEM | Qty |
| 1 | LED Medicine Cabinet | 1PCS | 4 | Wall anchors | 6(8)PCS |
| 2 | Shelf clip | 8(16)PCS | 5 | Bottom bracket | 2PCS |
| 3 | Shelf glass | 2(4)PCS | 6 | #9 x 2 in. Screws | 6(8)PCS |

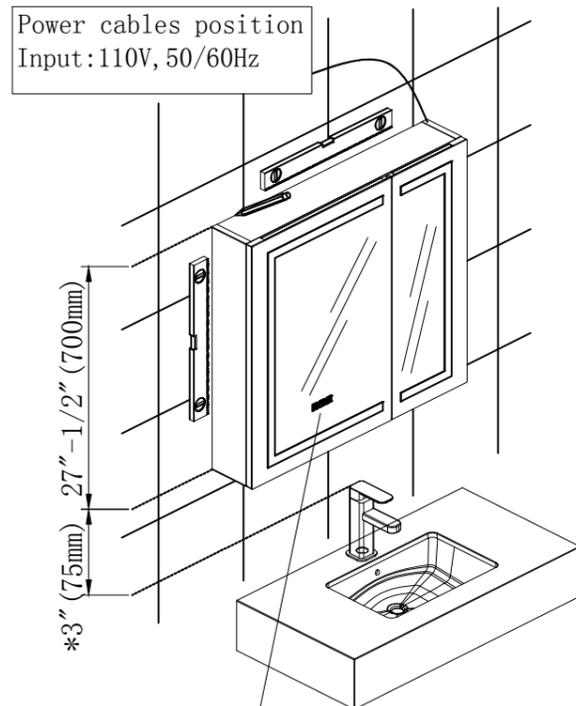


1). Determine the installation position of the LED Medicine Cabinet and mark it with a level on the wall.

NOTE:LED Medicine Cabinet should be placed minimum of 3" above the faucet.


2

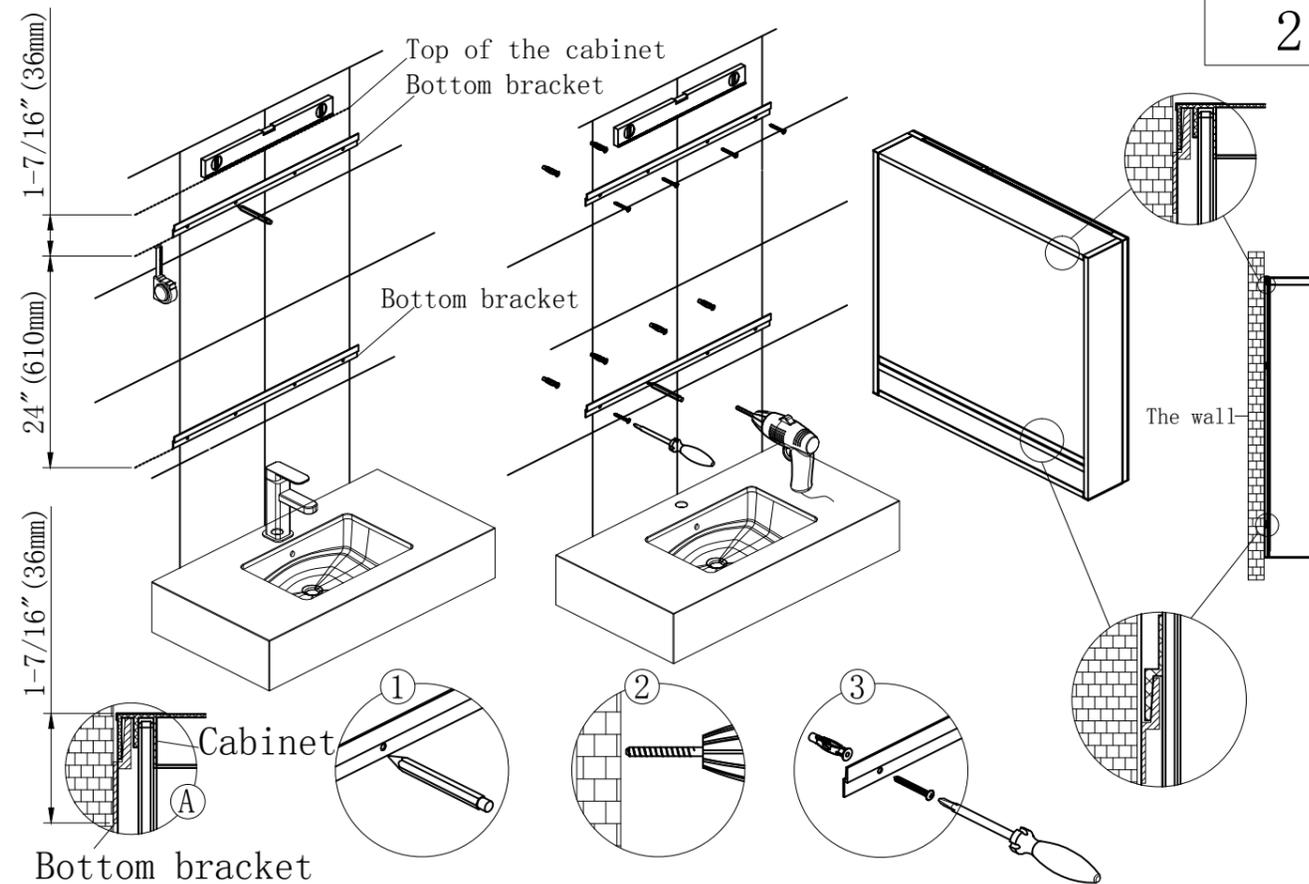

- 2) A. As shown above, mark the position of the Bottom bracket and the drilling position
- B. Install the Bottom bracket and make sure it is solid.
- C. Mount the LED medicine cabinet on the Bottom bracket.

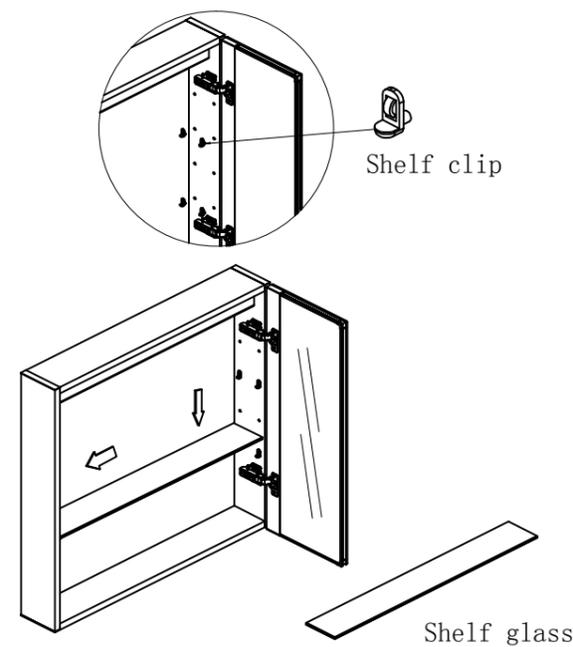

- 3). Install the Shelf clip in the cabinet and put in the Shelf glass.

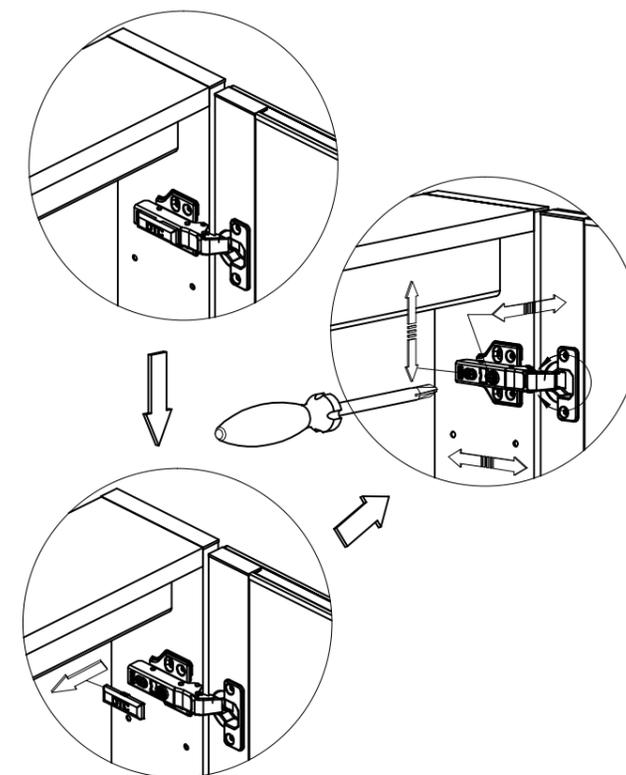

- 4). Adjust door position accordingly.